

OPS Module User Manual

Copyright and disclaimer

Disclaimer

BenQ Corporation makes no representations or warranties, either expressed or implied, with respect to the contents of this document. BenQ Corporation reserves the right to revise this publication and to make changes from time to time in the contents thereof without obligation to notify any person of such revision or changes.

HDMI trademark disclaimer

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade Dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Copyright

Copyright 2023 BenQ Corporation. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of BenQ Corporation.

Product Support

This document aims to provide the most updated and accurate information to customers, and thus all contents may be modified from time to time without prior notice. Please visit the website for the latest version of this document and other product information. Available files vary by model.


- Make sure your computer is connected to the Internet.
- Visit the local website from www.BenQ.com. The website layout and content may vary by region/country.
- User manual and related document: www.BenQ.com > Business > SUPPORT > Downloads > model name > User Manual
- (EU only) Dismantled information: Available on the user manual download page. This document is provided based on Regulation (EU) 2019/2021 to repair or recycle your product. Always contact the local customer service for servicing within the warranty period. If you wish to repair an out-of-warranty product, you are recommended to go to a qualified service personnel and obtain repair parts from BenQ to ensure compatibility. Do not disassemble the product unless you are aware of the consequences. If you cannot find the dismantled information on your product, contact the local customer service for assistance.

Table of contents


Copyright and disclaimer	i
Product Support.....	ii
Package contents.....	1
Port overview.....	2
Initial setup	3
Install the OPS	3
Launch OPS interface	3
OPS launcher interface.....	4
Side tool bar	5
Product information.....	6
Specifications.....	6
Dimensions	8

Package contents

 Open the sales package and check the contents. If any item is missing or damaged, please contact your dealer immediately.



OPS

 

Antenna x2

 


Safety statements



- Before discarding the package, check that you haven't left any accessories inside the box.
- Dispose of packaging materials wisely. You can recycle the cardboard carton. Consider storing the package (if possible) for future transport of the display.
- Do not leave plastic bags within reach of young children or babies.

Port overview

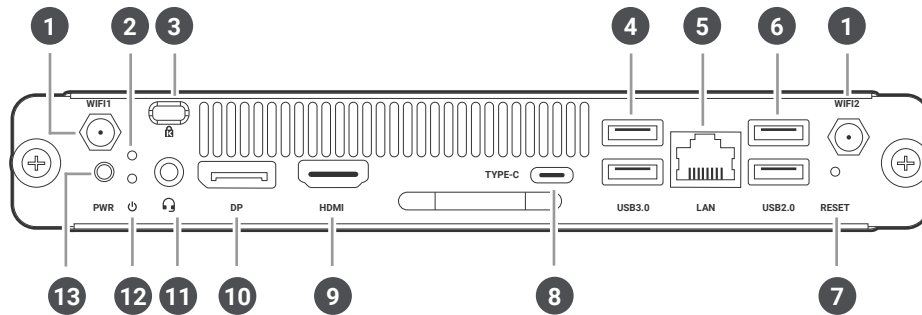


No.	Name	Description
1	Antenna	Wi-Fi antenna interface
2	HDD LED	Hard Disk Drive indicator light
3	Lock	Lock for security
4	USB-A	USB 3.0 connectors
5	RJ45	RJ-45 Ethernet network connector
6	USB-A	USB 2.0 connectors
7	RESET	Long press 6 seconds to reset the device to factory settings.
8	USB-C	Type-C connector with USB 3.0 data transmission
9	HDMI OUT	HDMI 1.4 output. Connects to another display device to extend screen.
10	DP OUT	DP 1.4 output. Connects to another display device to extend screen.
11	Audio IN & OUT	Connects a headset, microphone or other audio devices to the audio port.
12	POWER LED	Power indicator light
13	POWER button	Press the power button to turn on the device.

Initial setup

Install the OPS

 1. Install the antennas on the product.
2. Remove the OPS cover of the display.
3. Insert the product into the PC slot of the display.

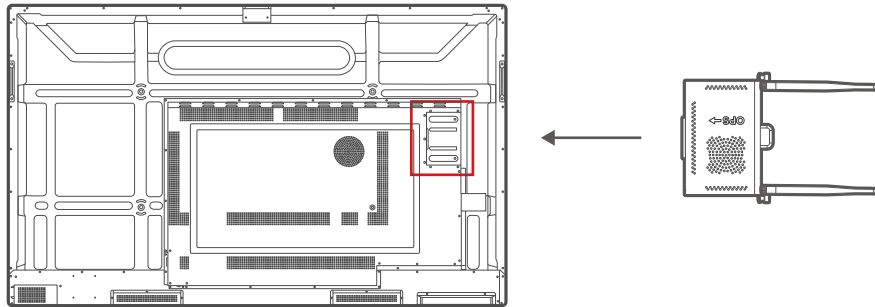


The place of the OPS slot varies between models.

4. Secure the product to the display with the provided screws.


Launch OPS interface

 1. In the original interface of your display, select  > **OPS** to activate the launcher.

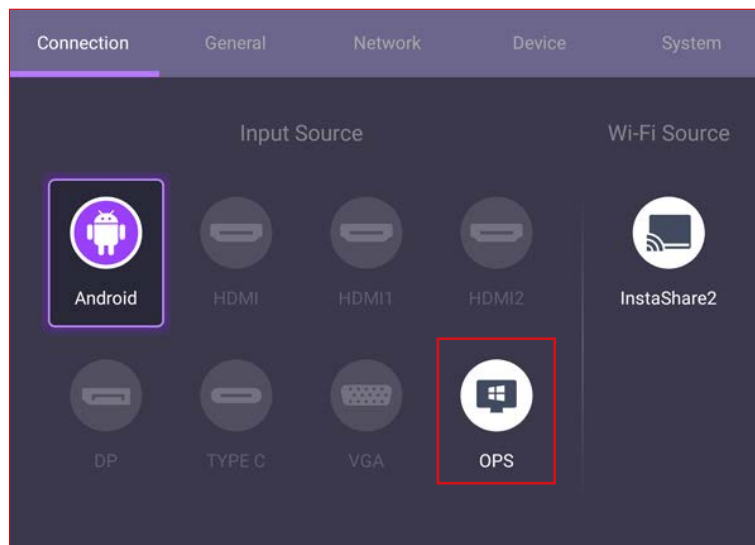

2. For the first setup, follow the on-screen steps to complete the initial settings.

 OPS launcher interface

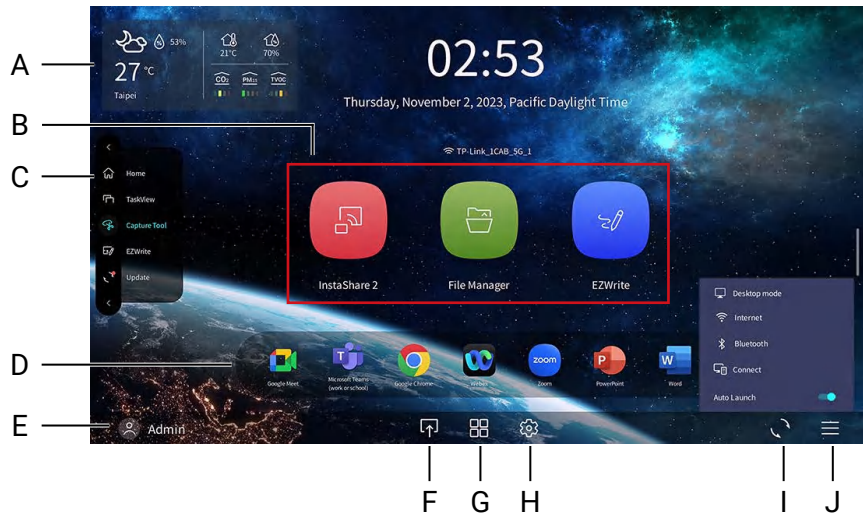

- A. **Air quality information ***
Shows the air quality, temperature, and humidity.
- B. **Main features**
Tap to load the file manager, screen-sharing app and whiteboard app.
- C. **Side tool bar** (see [page 5](#))
- D. **App shortcuts**
Add up to 7 shortcuts
- E. **User information**
- F. **Connection ***
- G. **All apps**
Tap to find all apps, widgets and bookmarks.
- H. **OSD menu ***
- I. **System update**
- J. **Quick control**
Tap to switch to **Desktop mode**, or to control **Internet**, **Bluetooth**, and **Connect**.



* The feature is only available on RP6503, RP7503, RP8603.

Side tool bar

Tap the side bars at the left or right of the main interface to access the side tool bar.



You may drag the tool to the top or bottom of the screen to suit your preference.



- A. **Home**
- B. **Task view**
Switch between recent apps and input sources.
- C. **Capture tool**
- D. **EZWrite**
- E. **Update**

Product information

Specifications


Item	Specifications	
	TEY41	
CPU	i5 1235U , Intel® 12th Gen.	i7 1255U , Intel® 12th Gen.
Memory	DDR4 8GB x 1 (8GB Single channel) DDR4 4GB x 2 (8GB Dual channel) DDR4 8GB x 2 (16GB Dual channel)	
Storage	256 GB/512 GB	
Graphics	Intel® Iris® Xe Graphics	
Resolution	Max. 3840 x 2160 @60Hz	
Chipset	Integrated into CPU	
Network	Intel Gigabit Ethernet	
Wi-Fi	Intel® AX101 802.11 a/b/g/n/ac/ax (2.4 GHz and 5 GHz)	
USB 3.1 Type-C	x1	
USB 3.1 Type-A	x2	
USB 2.0 Type-A	x2	
HDMI out (4K@60Hz)	x1	
Display port (1.4)	x1	
RJ45 (10/100/1000M)	x1	
3.5mm Line out/in (2 in 1 Conn. function)	x1	
Wi-Fi BT ANT (support Wi-Fi 6 BT 5.2)	x2	
Power button	x1	
Reset button	x1	
Power LED	x1	
SSD LED	x1	
DC-IN	x1	
OS License (optional)	Win11 Trial version Win11 IoT Enterprise	
Power supply	DC input +12V~+19V	
Cover material	Metal	
Device dimension L*W*H (mm)	119 × 118 × 30	
Package dimension L*W*H (mm)	254 × 196 × 77	
Net weight	0.97 kg	
Gross weight	1.23 kg	
Operation temperature	5°C ~ 45°C	

Item	Specifications
	TEY41
Operation humidity	10% ~ 95%
Storage temperature	-20°C ~ 70°C
Storage humidity	10% ~ 95%



Specifications and functions are subject to change without notice.

 Dimensions

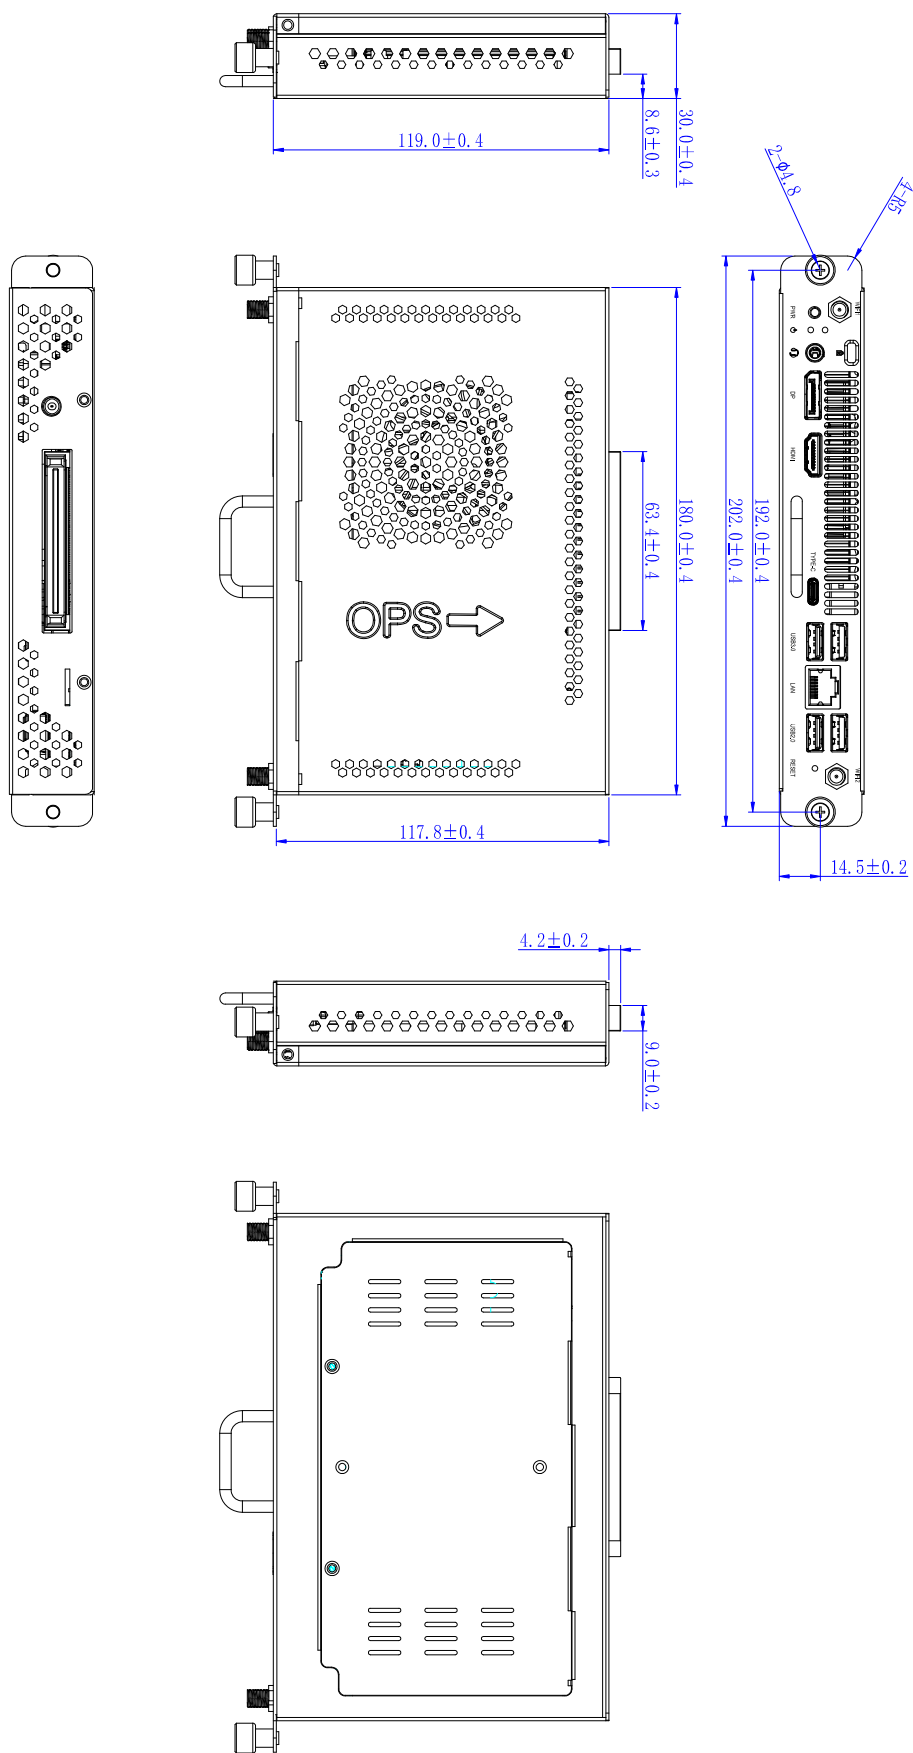

Unit: mm

Instructions of the battery disassembled

 The symbol indicates DC voltage

Battery protection:

- element 1: not available
- element 2: “Do not ingest battery, Chemical Burn Hazard” or equivalent wording
- element 3: the following or equivalent text
The remote control supplied with] This product contains a coin / button cell battery. If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- element 4: the following or equivalent text Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed.

Warning:

- Never use the appliance in extreme conditions (high or low extreme temperatures, high altitude...) during use, storage or transportation, may result in explosions or leakage of flammable liquids or gases.
- Do not expose the product to pressure, impact, strong vibrations, or liquids. Any of these occurrences may lead to a short circuit or cause damage to the battery or electrical circuit.
- Do not disassemble, cut, squeeze, puncture, short-circuit the remote controller or expose it to liquids, fire, heat sources such as stoves, heaters, or an environment with an ambient temperature higher than 45°C. Any of these occurrences may lead to a short circuit or cause damage to the battery or electrical circuit.
- CAUTION: Risk of fire or explosion if the battery is replaced by an incorrect.
- Batteries are to be inserted with the correct polarity.

How to replace the battery:

1. Prepare a cross-head screwdriver.
2. Prepare the battery (Model: CR2032; Rating: 3VDC 220mAh) to be replaced, and purchase a matching one from the dealer.
3. Use the screwdriver to remove the screws on the top cover and open it, as shown in the figure below:



4. Remove the battery from the device and install the new battery, as shown in the figure below:



5. Do not dispose of the old battery casually; please recycle it at designated locations and pay attention to environmental protection.

Note: In the five years following the launch of the final batch of products, battery-related accessories will still be available for purchase at a reasonable price.